



How to Adjust the Bind-it-All for Owire

March 2007 - To ensure perfect binding and prevent damage to your Bind-it-All and wires, it is important that you set your machine to the correct wire setting, according to the size of the wire you use.

There are two ways to do this:

- 1) The Bind-it-All comes with a plastic “key chain” of wire guide templates. The templates consists of owire illustrations shown in actual size. Zutter wire sizes can be found on the outside of each package of wire.
- 2) When setting the Bind-it-All for a particular wire size, place the appropriately sized template guide into the press area; turning the adjustable knob until the wire guide is held upright by the machine. Back the pressure off just a bit and remove the wire guide. Your machine is now set for the appropriate diameter.



- 3) If you don't have the wire guides with you, twist the knob at the front of the Bind-it-All until it is placed on the line above the diameter of wire you are using. Place it on the outside lines, not the one that dips in the center. The example photo (below left) is set at $\frac{3}{4}$ inch.



- 4) If you are using a stray piece of wire, and you don't know the exact size, you can compare the wire you have to the picture of the wire diameter on the template guide.

Duplication of this information is permitted only for the educational purposes of scrapbook and craft retailers and scrapbook instructors and is provided as a service by Zutter Innovative Products.

©2007 Copyright Zutter Innovative Products and www.ZutterZisters.com. All Rights Reserved.